

Important installation information for do88 aluminum radiator together with the intercooler.




When the do88 aluminum radiator is installed together with the intercooler you must install it with the included hardware kit.

Its necessary to do this to allow some movement in the joint between radiator and intercooler if not installed according to this it will void the warranty.

Parts included in hardware kit:

1. 4pcs Flange screw M6x40
2. 16pcs M6 flat washer
3. 4pcs Nuts
4. 4pcs Rubber grommet
5. 4pcs Metal sleeves

1. Install all four rubber grommets in the holes according to photo below.

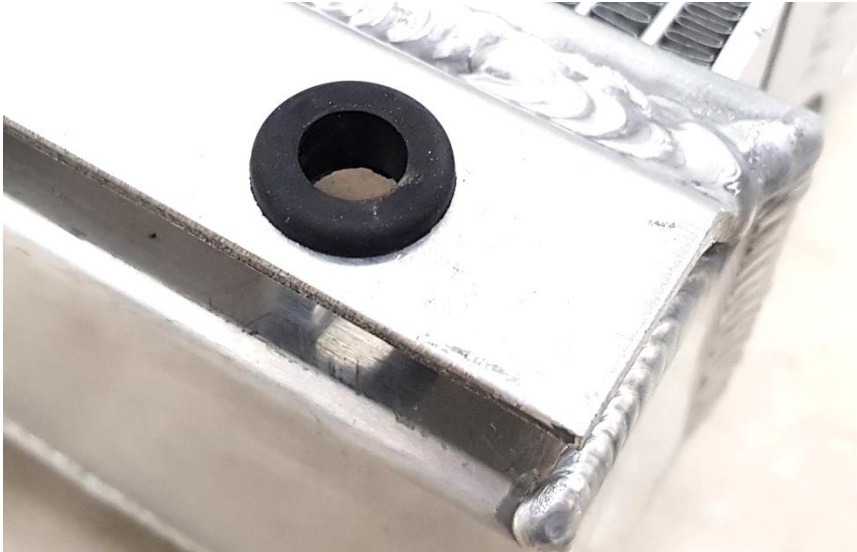

2. Install all four metal sleeves as on the photo below.



4. Fasten the intercooler and AC-condenser to the radiator like this:

1. M6x40 screw
2. M6 washers 2-3pcs. Put enough washers to make clearance in-between the screw top (XX) and radiator.
3. M6 washer
4. M6 nut

